



Sonnax.

• 6F50

Direct

- direct
- 3 5
- Reverse
- 2-3, 4-5

Sonnax

124740-26K (34,29) F-124740-TL26 & VB-FIX

124740-21K (46,48) F-124740-TL21 & VB-FIX

- /
- /
- /
- /
- /

Sonnax

124740-12K F-124740-TL12 & VB-FIX

Intermediate

- Intermediate
- 2 6
- 1-2, 5-6

Sonnax

124740-17K F-124740-TL17 & VB-FIX

- /
- /
- /
- /

Sonnax

124740-16 ()

124740-03K ()

- /
- /

Sonnax

124740-24K F-124740-TL24 & VB-FIX

- /
- /
- /

Sonnax

124740-14K F-124740-TL14 & VB-FIX

L/R Overdrive

- L/R / overdrive
- 4-5-6
- Reverse
- 3-4

 
- /
- /
- /

- /
- /

Sonnax

124740-02K = ★


- /
- /

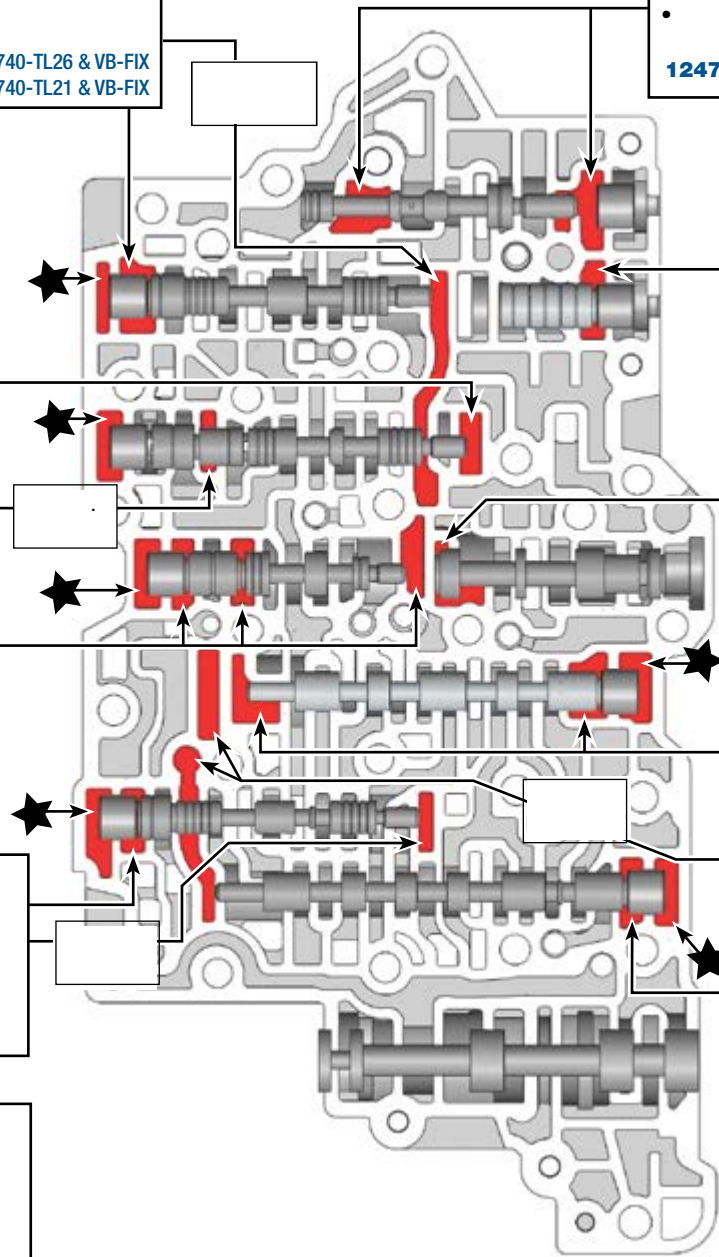




Sonnax.

 • 6F50

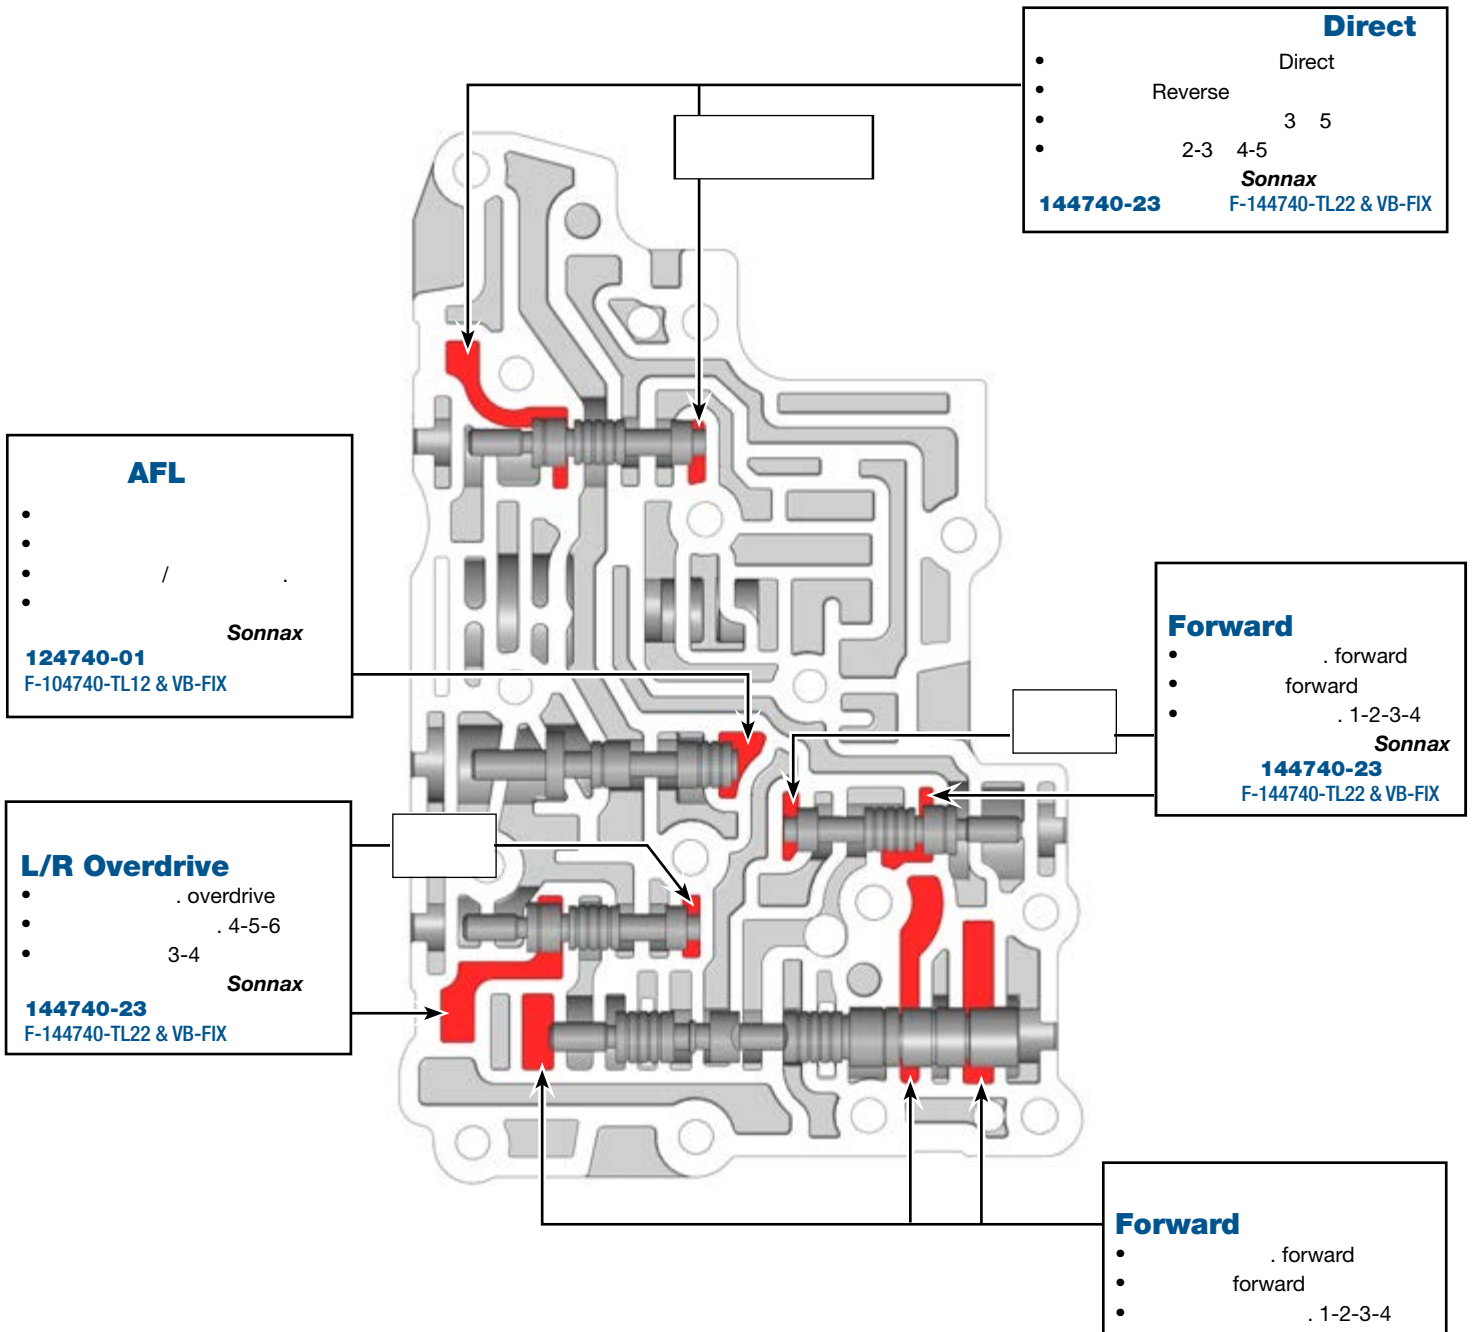




• 6F50

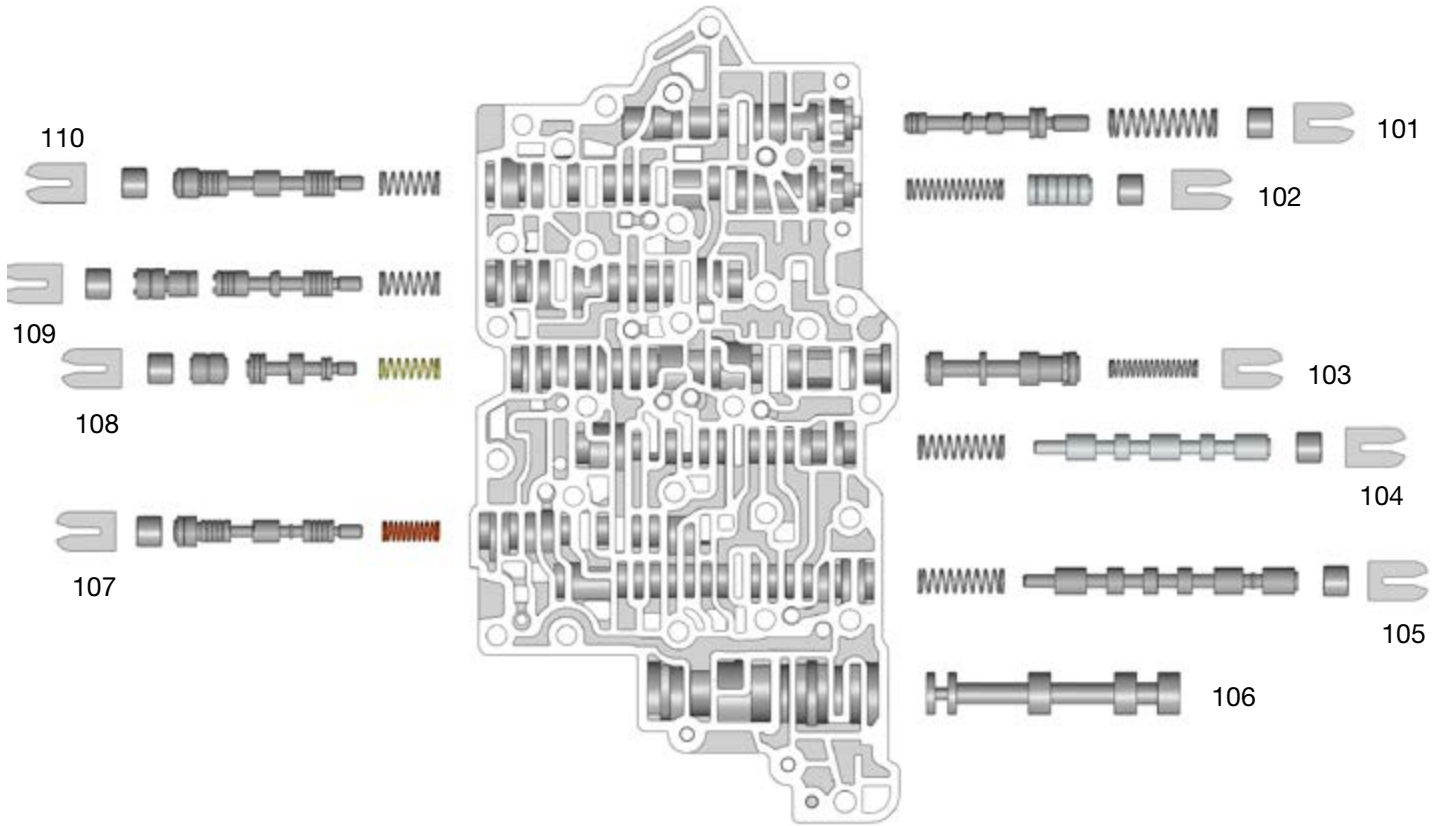 

6F50	
101	
102	-
103	
104	
105	
106	
107	L/R Overdrive
108	
109	Intermediate
110	Direct



 • 6F50

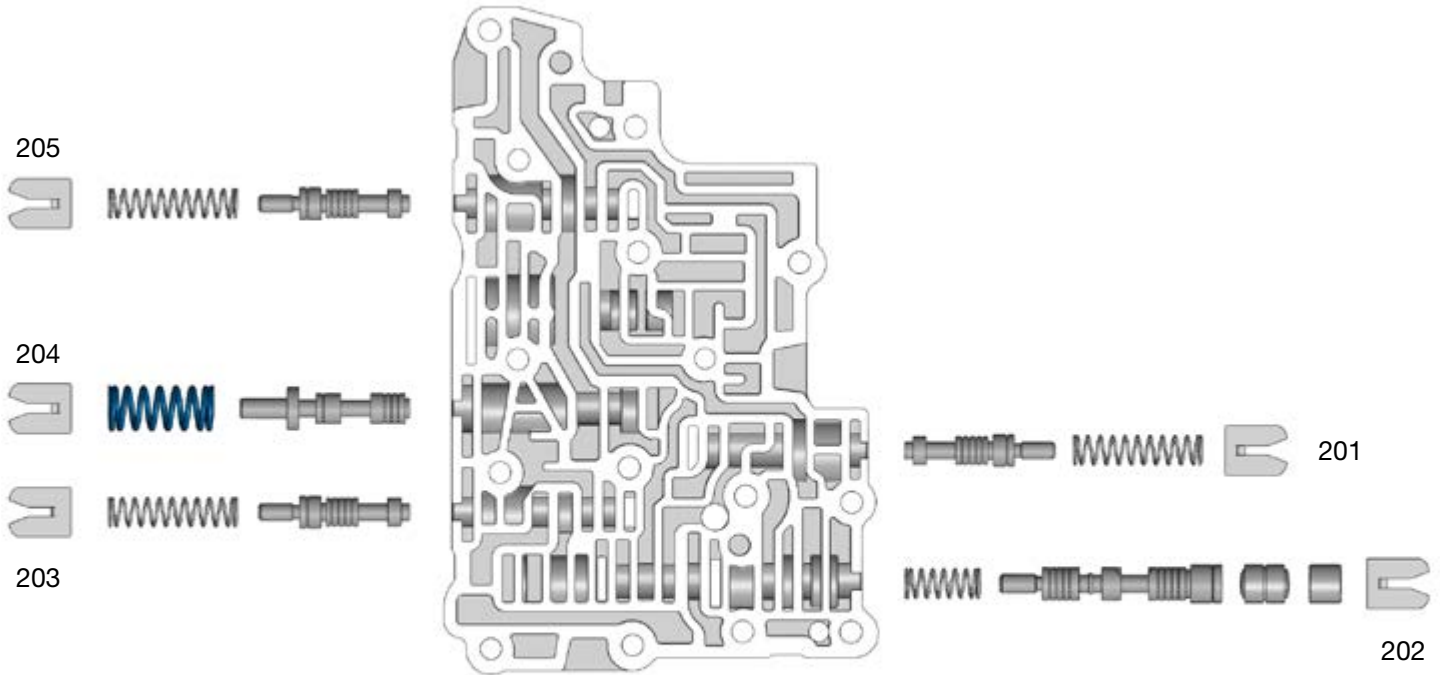

6F50	
201	Forward
202	Forward
203	L/R Overdrive
204	AFL
205	Direct